



TIMER AND PHOTOCELL INSTRUCTIONS FOR USE

PLUG-IN TIMER SETTING AND OPERATION:


1) TO SET THE CLOCK TIMER:

- Hold the timer so the front is facing you, with the override (manual) switch on top.
- Press down to move the rim of the timer face (the section with numbers) clockwise until the arrow on the inner white circle points to the approximate time of day.
- NOTE: The numbers on the timer face correspond to the hours in a day. Each hour is divided into two (2) 30 minute segments.

2) TO SET TIME "ON":

- Push the green "ON" peg into the slot corresponding to the time "ON" you desire.
- Push the red "OFF" peg into the slot corresponding to the time "OFF" you desire.
- Timer pins represent 30-minute intervals. It is impossible to perfectly sync multiple transformers with separate timers and/or photocells. Use a central control if perfect sync is desired.

POINTER SHOULD INDICATE CURRENT TIME OF DAY. THIS TIMER IS CURRENTLY READING 7:30 PM. TO DISABLE THE TIMER FOR AN EXTENDED PERIOD, UNPLUG IT AND PLUG THE BLACK POWER CORD DIRECTLY INTO THE OUTLET UNDER THE TIMER.

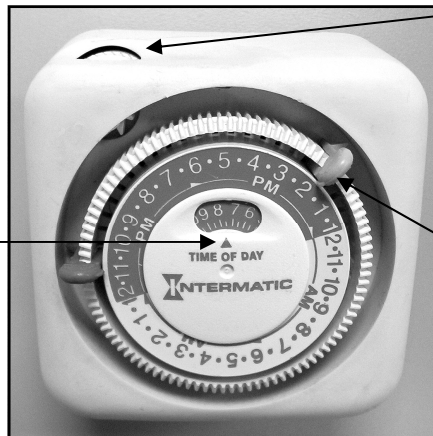

OVERRIDE (MANUAL) SWITCH. IF TRYING TO MANUALLY TURN ON A -PC MODEL IN THE DAYTIME, YOU MUST PUT BLACK CAP OR TAPE OVER THE PHOTOCELL BEFORE THE MANUAL ON WILL WORK.

CURRENT "ON" TIME SHOWS 2:00 PM TO 11:00 PM. GREEN PIN IS PLACED AT 2:00 PM, RED PIN AT 11:00 PM.

PHOTOCELL SETTING AND OPERATION:

- Install Photocell models in areas that receive daylight exposure.
- Set timer to go on at around 2:00 PM. the Photocell will immediately shut off the transformer, because the photocell will still see the daylight. At dusk, the photocell will then have power to it and turn the transformer "ON". Set the tripper pins on the timer to the desired "OFF" time.
- To test Photocell/Timer transformer YOU MUST PUT BLACK CAP OR TAPE OVER THE PHOTOCELL BEFORE MANUAL OVERRIDE WILL WORK.